



## OPTIMIC™ 2182

### Ruggedized Infrasound Microphone, with Extended Frequency, High SPL

Fiber optic microphone for indoor/outdoor acoustic monitoring with infrasound, extended frequency range response and high SPL. Ideal for industrial use, placement in heavy machinery, or where the microphone requires very robust housing and fiber cables.

#### FEATURES

- ▶ Robust design suited to industrial applications
- ▶ Absolute EMI/RFI immunity
- ▶ Completely passive sensor with no electrical parts
- ▶ Infrasound capability
- ▶ Extended frequency response and high SPL
- ▶ Standard analog output
- ▶ High reliability and environmental stability
- ▶ Optical fiber connection over extended lengths without signal loss
- ▶ Exceptionally low sensitivity to vibration
- ▶ Plug-and-play system
- ▶ Cost-effective, long-term

#### TECHNICAL SPECIFICATIONS

Polar Pattern	Omnidirectional
Frequency Response	0.5-15,000 Hz
Conformity 0.5 - 1,000 Hz	±1 dB
Conformity 1,000 - 15,000 Hz	±3 dB
Sensitivity	3 mV/Pa ±10% at 1 kHz
Equivalent Self-Noise	≤60 dBA
Maximum Acoustic Pressure	150 dB SPL
Total Harmonic Distortion	<1% at 120 dB SPL
Equivalent Vibration Sensitivity	Max. 45 dB SPL/g at 1 kHz
Supply Voltage	8-15 V DC
Current Drain (max.)	110 mA
Operating Temperature	-20 to +60 °C (-4 to +140 °F)
Storage Temperature	-20 to +60 °C (-4 to +140 °F)
Humidity - 1000 hours	Up to 95% RH at 40 °C
MTBF	>100,000 hours
Microphone Head	
Material	Delrin
Dimensions D/L	30/90 mm
Weight	28 g
Optical Cable Length	10 m

#### APPLICATIONS

- ▶ Infrasound measurements
- ▶ High fidelity equipment monitoring
- ▶ High voltage electrical utilities
- ▶ Oil and gas detection sites
- ▶ Highly explosive areas
- ▶ High RFI and EMI areas
- ▶ Aerospace measurements
- ▶ Petrochemical facilities
- ▶ EMC test labs



# OPTIMIC™ 2182 System Kit

Complete, versatile, cost-effective solution

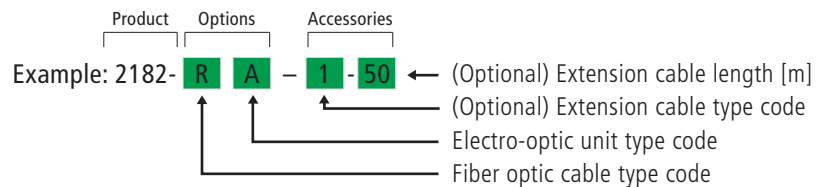
Optoacoustics' OPTIMIC 2182 system is comprised of our advanced OPTIMIC fiber optic microphone, electro-optic unit, audio cable with BNC connector, DC power supply and a ruggedized carrying case.

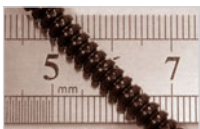
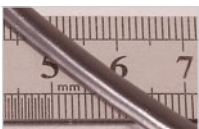







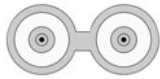
Optoacoustics EOU 100 electro-optic unit showing fiber optic, audio, and power supply connections

## PRODUCT ORDERING GUIDE

Use the matrix below to select options and accessories for your order.



Options	Fiber Optic Cable Type		Electro-Optic Unit Type	
Item	Black Polyamide ∅ 5.1 mm	Milspec ∅ 5 mm	EOU 100 Single Channel	EOU 200 Single Channel
Code	<b>R</b>	<b>M</b>	<b>A</b>	<b>B</b>
				

Accessories	Extension Cable Type (Specify length from 10-100 m)			
Item	Outdoor, Milspec ∅ 5 mm	Outdoor, Polyamide ∅ 5.1 mm	Indoor, Rugged ∅ 3.0 mm	Indoor, Zip Cord ∅ 3.0 x 2 mm
Code	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>
				



SOUND SOLUTIONS FROM LIGHT TECHNOLOGY

Optoacoustics is a leading manufacturer of high performance, optical fiber-based sound and vibration sensors. Each of our products combines the natural intelligence of optics and acoustics to meet technical performance demands which cannot be addressed by conventional sensing solutions. Optoacoustics' pioneering technology is protected by over 20 international patents.

**HEADQUARTERS**  
 17 Hata'asia Street  
 60212 Or-Yehuda  
 Israel

**TOLL-FREE** +1 866-867-5029  
**PHONE** +972 3-634-4488  
**FAX** +972 3-634-9292  
**EMAIL** info@optoacoustics.com

Copyright © 2007 Optoacoustics Ltd. All rights reserved. The information appearing here is subject to change without notice. Unless otherwise indicated, all product names are trademarks of Optoacoustics Ltd.

DS-2182-1 1009